

Maniglia per portelloni - Luggage door handles



P.332

**Materiale - Material**

PBT + anti-UV, Inox (Stainless Steel), Ottone (Brass)

**Colore - Colour**

Nero - Black

**Pezzi confezione - Package items**

10 pezzi - pieces

**Volume confezione - Package volume**

95,7 dm³

**Peso confezione - Package weight**

secondo codice - according to item code

**Ricambi - Spare parts only**

vedi sez. tecnica - see technical section

**Accessori - Accessories**

vedi sez. tecnica - see technical section

**Carico di rottura a 20°C - Breakup load at 20°C**

Impugnatura fissa - Fixed handgrip = 4.800 N

In apertura - Opening = 1.600 N

**Temp. di esercizio - Working temp.**

-50/+70 °C

**Normative - Norms**

R107.8; R118.3; FMVSS 302; ISO 3795; REACH (SCIP number at page A4-A5);
ROHS; CMR.

More info on page A4-A5 and website on "Directives and regulations" area.



P.332

Cod.	Tipo - Type					
63969	pn - pneumatic			J1	14.500	100
68501	pn - pneumatic			J2	14.500	100



lotto minimo d'acquisto - minimum purchasing lot



versione con serratura, chiave rimovibile con maniglia chiusa

version with lock, removable key with locked handle





versione con serratura, chiave rimovibile con maniglia chiusa e aperta


version with lock, removable key with both locked and unlocked handle

J1-J2 Sez. tecnica (inserimento P.474) - Technical section (assembly P.474)

P.332

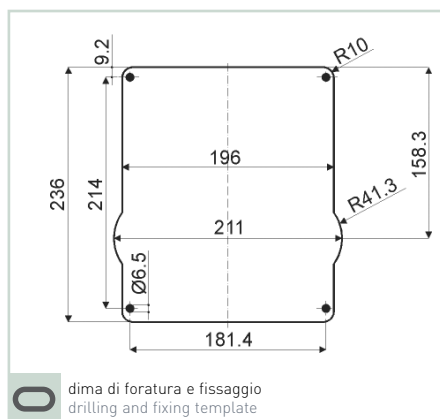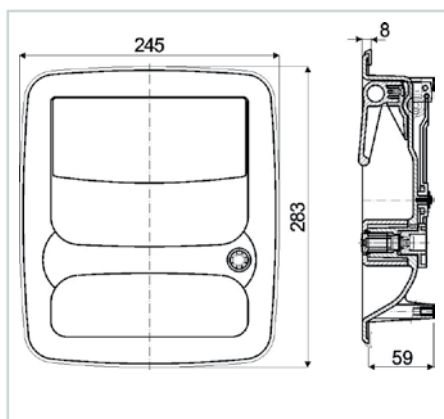



O dima di foratura e fissaggio
drilling and fixing template

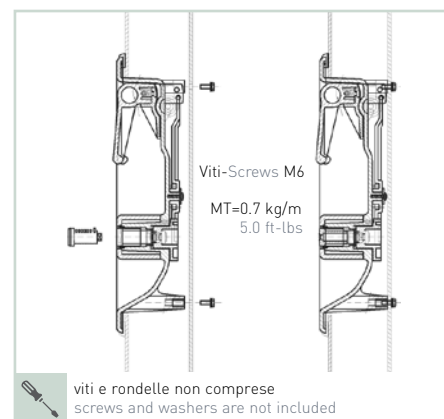

■ Inserimento - Assembly P.474 for J1

- 1 Verificare corretta posizione camma
- 1* Se non OK, ruotare in senso antiorario il "quadro" sul fondo dello statore sino a fine corsa.
- 2 Inserire la serratura con la lamella rivolta verso lo scivolo (vedi pag.A3), previo ingrassaggio preliminare. Chiave removibile solo con maniglia chiusa



- 1 Ensure that the cam is in the "closed" position
- 1* If not, turn the "square" at the bottom of the stator, anti-CW until it rest.
- 2 Insert the lock as shown with the fin facing the chute (more info page A3), after preliminary greasing. Removable key only with locked handle

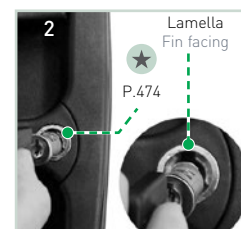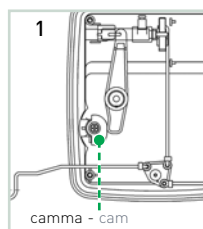

■ Inserimento - Assembly P.474 for J2m, J2pn

- 3 Verificare corretta posizione camma
- 3* Se non OK ruotare in senso orario il "quadro" sul fondo dello statore sino a fine corsa.
- 4 Inserire la serratura con la lamella rivolta verso lo scivolo (ulteriori info pag.A3), previo ingrassaggio preliminare - Chiave removibile sia con maniglia chiusa che aperta

- 3 Control if cam is in "open" position.
- 3* If not turn, the "square" at the bottom of the stator, clockwise until it rest.
- 4 Insert the lock as shown with the fin facing the chute (more info page A3), after preliminary greasing. Removable key only with locked and unlocked handle

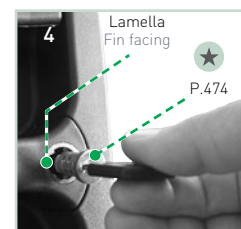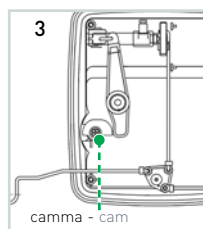

■ Schema chiusura pneumatica - Pneumatic diagram Sez. B pag B9

■ Esempi d'applicazione - Examples of application

